


Verification of Square Frame

Steps

1. Take a tape measure and measure from the top left corner to the bottom right corner.
Record this dimension
2. Take a tape measure and measure from the top right corner to the bottom left corner.
Record this dimension

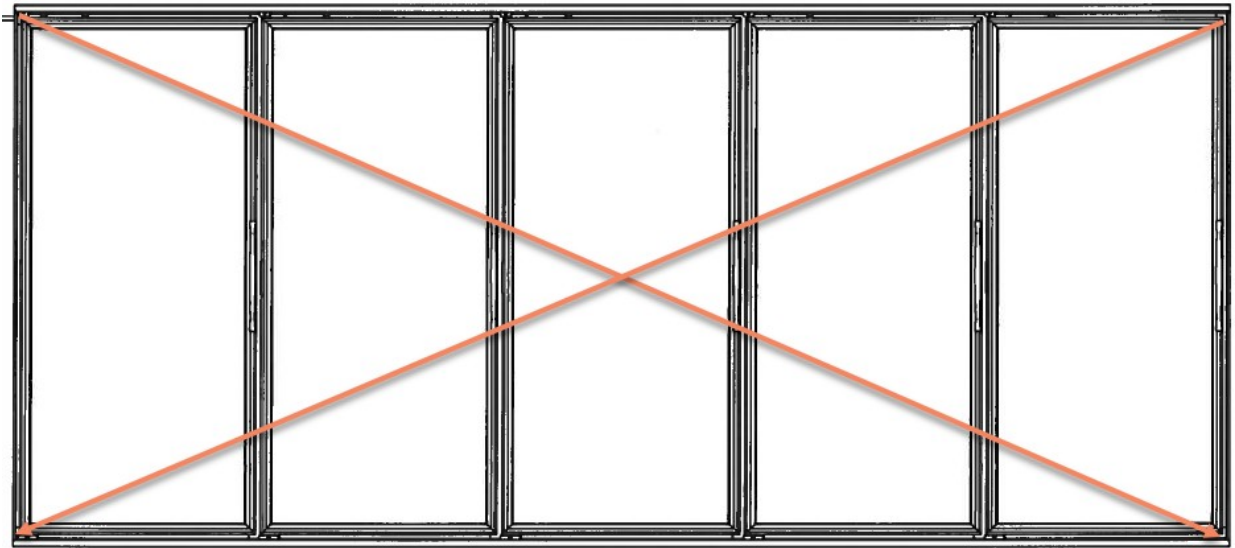

3. Note: measure from outside metal to outside metal
 - a. NOTE: if one side of the frame has a flange and the other side does not, measure from the interior of the frame corner
4. Dimensions should be within 1/16" of each other
 - a. If frame is not square, it will need to be reinstalled
5. Place a 4 foot level on the vertical end and center mullions to assure the frame is plum
6. Place a level on the horizontal top and bottom of the frame to assure the frame is plum
7. It is essential that the frame be plum, square, and level for the doors to seal properly.